

FIG. 1

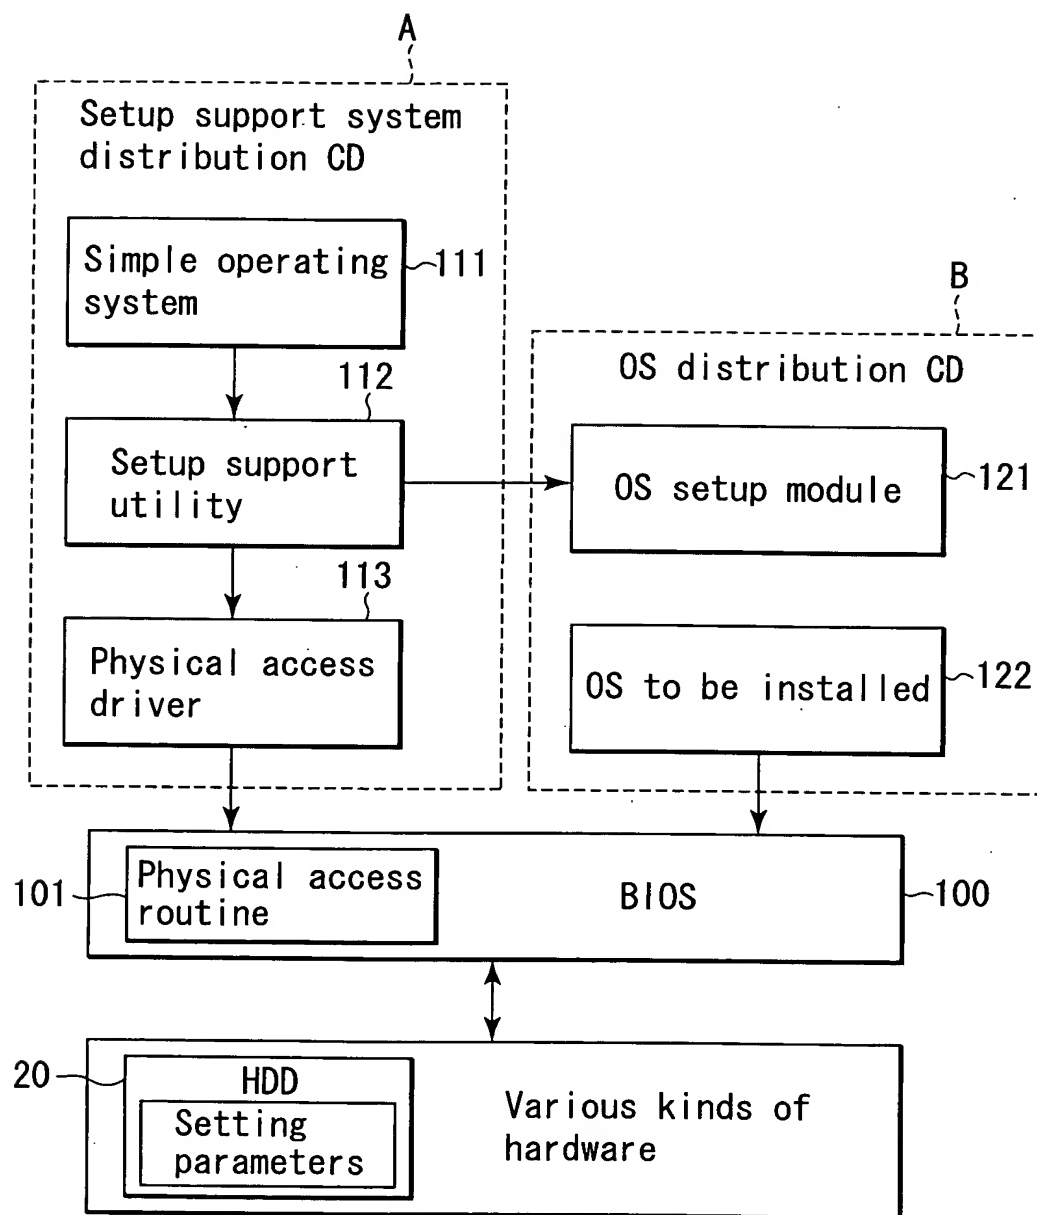


FIG. 2

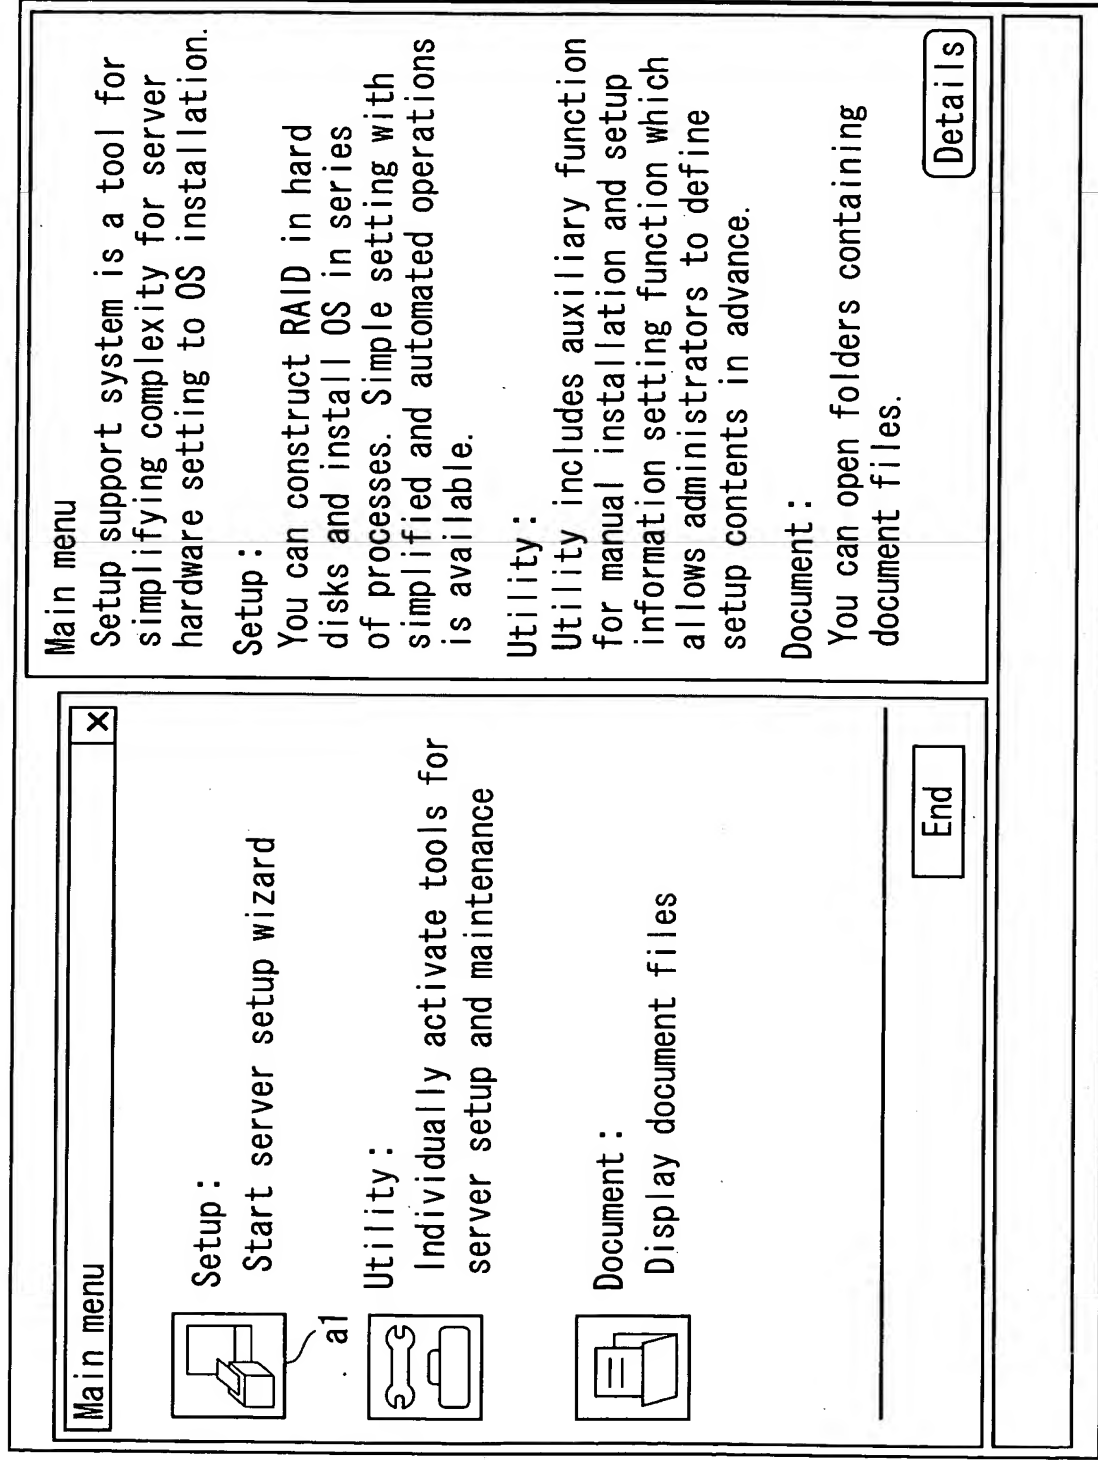


FIG. 3

| Simple RAID setting | |
|--|---|
| <div>Select type of RAID <div>a2</div><div><input checked="" type="radio"/> RAID 0 (1 to 5 HDDs are usable) <input type="radio"/> RAID 1 (2 HDDs are used) <input type="radio"/> RAID 5 (3 to 5 HDDs are usable)</div></div> | <div>Simple RAID configuration</div> <div>Input type of RAID configuration and number of hard disks to be used for RAID configuration.</div> <div>In simple RAID configuration, one array group is formed.</div> <div>Details</div> |
| <div>Allocate HDDs</div> <div>Settable number of HDDs a3 Set number of HDDs MAX</div> <div><div>a5 a4</div><div><Back Next></div><div>a6</div><div>Main menu</div></div> | |
| <div>0 50 100</div> <div>1/n windows are set</div> | |

FIG. 4

Disk partition setting

X

Select file system

a7

☒ FAT16 (4Gbyte)

☐ NTFS

Input partition size

4096

Mbyte

<Back

Next>

a4

Main menu

Generation of disk partition

Select file system and size of partition in which XXXXX Server 2003 should be installed. 4,096 Mbytes or more can be designated as partition size.

Details

0

50

100

2/n windows are set

FIG. 5

User information setting

User name :

Organization name :

Product ID/CD key :

Computer name :

<Back

Next>

Main menu

0

50

100

User information

Input your name, name of company, name of section to which you belong, CD key or product ID of XXXXXX Server 2003, and computer name of server.

Following symbols cannot be used in computer name
?"/<>*|:¥;[];+=,.

" (double quotation mark) cannot be used in any items.

Details

FIG. 6

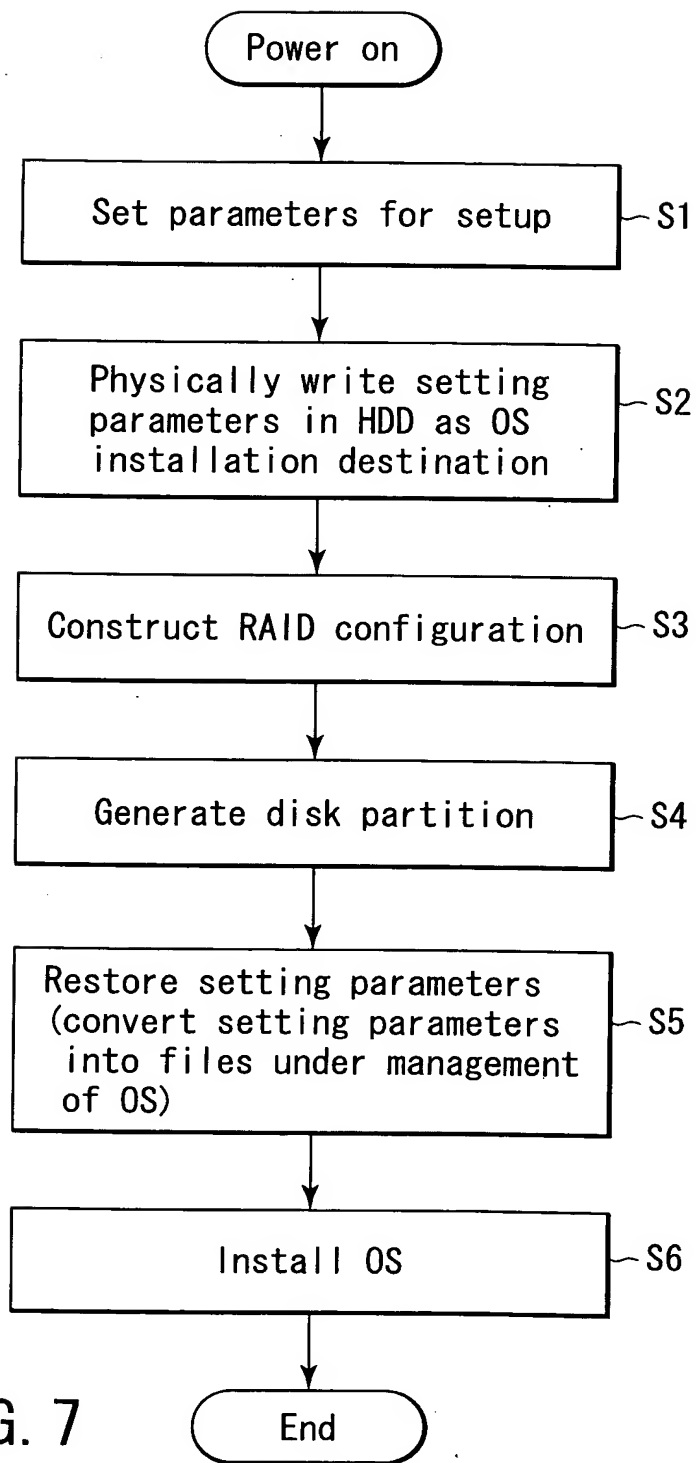


FIG. 7